

DRIPLOC ECONO WALL MOUNT SYSTEM INSTALL INSTRUCTIONS




Pic #1
Installing Socket Brackets



Install brackets located at the 4,5,7 & 8 o'clock positions as illustrated in Pic #2. Use self tapping screws to secure the brackets to the flanged or bull nosed edge of the fan using a minimum of 2 screws per bracket to secure it properly.

Pic #2
Place Boom Sock In Brackets

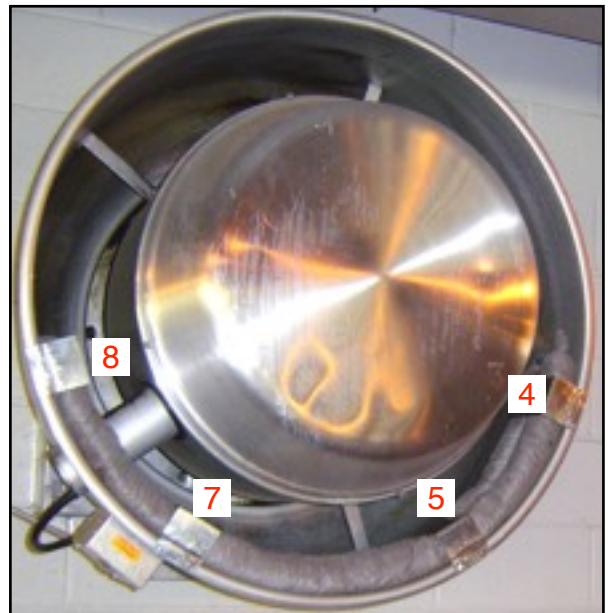

Place sock in brackets starting with #4. Pull sock securely into the brackets. When reach #8, double the sock back over, securing the second layer of the boom sock into the bracket then continue back to the #4 bracket.