

LV System And Pillow Filter Install



Locate area under drain where rack needs installed. **TIP:** Install system as high and close to drain as possible to help ensure grease goes into rack.




Use provided 3/8" self tapping screws and place 1st screw at top of the "keyway" hole



Level box and place second screw. **TIP:** If you back the screws out a quarter turn it will allow you to remove box off the "keyways" for service



Lay filter out flat and use your hands to evenly spread filter media.

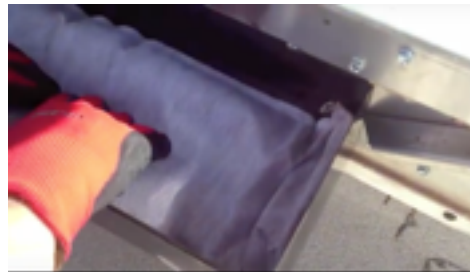

CRITICAL STEP!

With filter now in place use your hands to "bowl out" the middle of the filter. This allows the filter to fill evenly from the middle out.



CRITICAL STEP!

Ensure the drain hole has filter media in front of it, failure to do so may result in unfiltered liquids to leak from system.

Tools Needed/ Install Tips: Power Drill, 3/8" Nut Driver **Caution:** Use gloves as metal edges sharp, Wear eye protection